



## Chafing Dish Instructions

### CAUTION:

- Do not use anything but sterno type fuel in the burner
  - Never light the burner unit before putting liquid into the water pan. Low flame is sufficient to maintain proper heat.
  - Do not put unit on a hot stove or an open flame
1. Fill water pans with approximately 2 inches of hot water. Check water pan when in use to insure sufficient water is contained always. Do not use without water.
  2. Pry the lid off sterno and set sterno container into the heat cup. Light sterno, one can should last up to 2 hours.
  3. Food should be hot upon placing in food pan. Place stainless steel food pans inside water pans. Food pans can be used for cooking or set in the oven to keep food hot.

Upon returning all pans must be rinsed off and free from any food. Additional cleaning charge may apply if pans are not returned in proper condition.

Reminder to the renter, you are responsible for the equipment from the time of receipt to the time of return. Please make sure equipment is secured and protected when not in use. A replacement charge will be assessed for all items missing.