



## Avantco Coffee Maker Instructions

### 100 Cup Maker

- Do not use soft water.
  - Always use cold water
  - Allow 1 minute per cup of coffee when brewing
  - Before brewing a second time, allow urn to cool and rinse it out.
  - Remove Coffee basket and grounds as soon as the brewing cycle is complete.
1. Place on flat, level surface.
  2. Pour in cold water to desired fill line on the inside.
  3. Plug in urn.
    - a. To brew coffee, place the percolator tube and filter basket in the tank and pour the desired amount of coffee grounds into the basket. (See Measuring Guide)
    - b. Make sure the percolator tube is fitted properly inside the coffee urn before operation.
  4. The percolator filter and basket are not required for boiling water.
  5. Switch "ON"
    - a. The "HEATING" light will turn on to indicate the boiling process has begun.
  6. Tilt faucet level to dispense.

CUPS (5 oz. Servings)	Ground Coffee (8 oz. Dry)
<b>12-15</b>	<b>¾ Cup</b>
<b>20-25</b>	<b>1 ½ Cups</b>
<b>30-36</b>	<b>2 Cups</b>
<b>40-45</b>	<b>2 ½ Cups</b>
<b>50-55</b>	<b>3 ¼ Cups</b>
<b>60-65</b>	<b>3 ¾ Cups</b>
<b>80-85</b>	<b>5 ½ Cups</b>
<b>95-100</b>	<b>6 ¼ Cups</b>

Responsibility of the equipment remains with the Renter from the time of receipt to the time of return.