



www.tracistouch.com

(937)346-4420

Apex Punch/Champagne Fountain Instructions

- Always pre-cool the beverage whenever possible to at least 36° before adding it to the fountain.
 - You must strain your beverage if you use any juices with pulp.
 - **Do Not Disassemble the Fountain**
1. Pour a minimum of ten quarts of a pre-chilled beverage into the lower reservoir.
 2. Plug the fountain into an outlet. (Lights will come on automatically)
 3. Turn the control switch to "ON" and watch the beverage flow
 4. To Clean
 5. Turn the fountain control switch to "OFF".
 6. Empty the remaining beverage.
 7. Fill the lower reservoir with a least two the three gallons of warm water. Let circulate for five to ten minutes.
 8. Empty.
 9. Clean all parts thoroughly, including the bowls, with mild detergent. **DO NOT USE SCOURING PADS OR ANY TYPE OF ABRASIVE MATERIAL.**

The fountain must be returned clean and free of any debris or an additional cleaning charge will be assessed.

Reminder to the renter, you are responsible for the equipment from the time of receipt to the time of return. Please make sure equipment is secured and protected when not in use. A replacement charge will be assessed for all items missing.